

F



INSTRUCTIONS AND MAINTENANCE MANUAL



INSTRUCTIONS AND MAINTENANCE MANUAL

ASSEMBLY

APPLICATION OF EUROPEAN DIRECTIVES

See document of European Directives applicable to **CMO Valves**.



Valve F complies with the Directive on Equipment and Protective Systems for Potentially Explosive Atmospheres. In these cases the logo will appear on the identification label. This label shows the exact classification of the zone in which the valve can be used. The user is responsible for its use in any other zone.

HANDLING

When handling the equipment please pay special attention to the following points:

- **SAFETY WARNING:** Before handling the valve check that the crane to be used is capable of bearing its weight.
- Do not lift the valve or hold it by the actuator. Lifting the valve by the actuator can lead to operating problems as it is not designed to withstand the valve's weight.
- Do not lift the valve by holding it in the flow passage area. The valve's O-ring seal is located in this area. If the valve is held and lifted by this area it can damage the surface and the O-ring seal and lead to leakage problems whilst the valve is operating.
- To prevent damage, especially to the anticorrosive protection, it is recommended to use soft straps to lift the knife gate valves. These straps must be fitted around the top of body.



- Packing in wooden boxes: If the equipment is packed in wooden boxes these must be provided with clearly marked holding areas where the slings will be placed when securing them. In the event that two or more valves are packed together, separation and securing elements must be provided between them to prevent possible movements, knocks and friction during transport. When storing two or more valves in the same box you must ensure they are correctly supported to prevent deformations. In the case of dispatches by sea we recommend the use of vacuum bags inside the boxes to protect the equipment from contact with sea water.
- Pay special attention to maintaining the correct levelling of the valves during loading and unloading as well as during transport to prevent deformations in the equipment. For this purpose we recommend the use of mounts or trestles.

INSTALLATION

In order to avoid personal harm and other type of damage (to property, the plant, etc.) please follow these recommendations:

- The staff responsible for the handling and maintenance of the equipment must be qualified and trained in operations with this type of equipment.
- Use appropriate personal protection (gloves, safety boots, goggles, helmet, reflective vest...).
- Shut off all operating lines to the valve and put up a warning sign.
- Completely isolate the valve from the whole process.
- Depressurise the process.
- Drain all the line's fluid through the valve.
- Use hand tools not electric tools during the installation and maintenance, in according to current regulations.

Before installation, inspect the valve to ensure no damage has occurred during transport or storage.

Make sure that the inside of the valve's body and, in particular, the seal area are clean. Inspect the installation's pipes and the flanges to make sure they are clean. The **F valve** is unidirectional and an arrow is marked on the body indicating the flow direction. The word SEAT is also marked on one side of the body (near the packing gland) to indicate the side where the sealing joint is located.

The valve's normal working position is indicated in Abb 1.

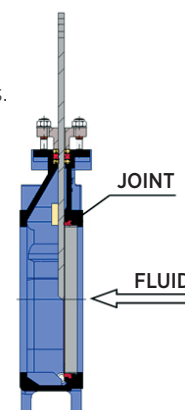


Fig. 1




ADVANTAGE

ASPECTS TO BE CONSIDERED DURING ASSEMBLY

Special care must be taken to respect the correct distance (gap) between the flanges and ensure they are correctly aligned and parallel (fig. 2).

The incorrect position or installation of the flanges can cause deformations on the valve's body and this could lead to operating problems.

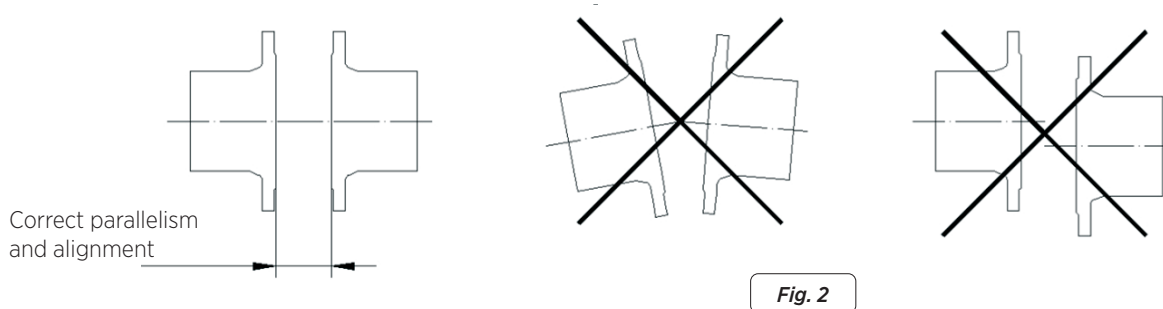

It is very important to make sure that the valve is correctly aligned and parallel to the flanges to prevent leakages and avoid deformations. Ensure the valve is assembled in open position.

- The screws and nuts to be fitted must also be suitable for the operating conditions and their measurements must in accordance with the approved plans. The screws and nuts must be fitted diametrically.
- The equipment must be firmly installed in the pipe. It will be joined to the pipe with a screw joint.
- The screws and nuts to be fitted must also be suitable for the operating conditions and their measurements must in accordance with the approved plans. The screws and nuts must be fitted diametrically.
- To torque to apply to the fastening screws and nuts must be correct according to the applicable standard, we recommend the initial assembly be carried out with a low tightening torque and after all the screws are in place, the final torque is applied.
- As regards scaffolding, ladders and other auxiliary elements to be used during the assembly, follow the safety recommendations indicated in this dossier.
- Once the equipment has been assembled make sure that there are no elements, whether interior or exterior, which can interfere with the gate valve's movement. It is very important to make sure that the valve is correctly aligned and parallel to the flanges to prevent leakages and avoid.
- Make the relevant connections (electrical, pneumatic, hydraulic) in the equipment's drive system following the instructions and wiring diagrams supplied it.
- The operation of the equipment must be coordinated with the site's control and safety staff and no modifications are permitted in the equipment's external indication elements (limit switches, positioners, etc.).
- When operating the equipment follow the safety recommendations indicated in this dossier.

ASSEMBLY POSITIONS

This valve is mainly designed for bin outlets, which is why it is usually assembled in the horizontal position, as shown in the following diagram (Fig. 3).

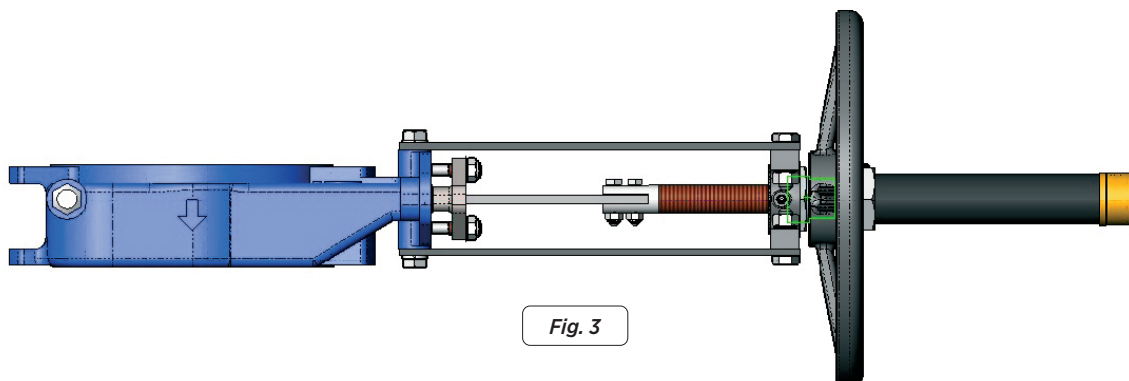


Fig. 3

- It is generally assembled under the hopper. This assembly position and the shape of the inside of the body ensure that no solids accumulate inside, and allows the product to flow easily through the valve.
- It can also be assembled vertically in the horizontal pipe, in both cases it is recommended to assemble them with the joints between the flanges, to ensure watertight integrity between the flanges and the valve.
- Once the valve has been installed, check that all the screws and nuts have been correctly tightened and that the whole valve action system has been correctly adjusted (electrical connections, pneumatic connections, instruments...).
- All **CMO Valves** are tested at its facilities, however, during the handling and transport the screws on the packing gland can come loose and must be re-tightened.
- Once the valve is installed in the pipeline and it has been pressurised, it is very important to check for any leakages from the packing gland to the atmosphere.
- In the event of a leakage, tighten the screws on the packing gland crosswise until the leakage stops, ensuring that there is no contact between the packing gland and the gate.
- A very high tightening torque on the packing gland's screws can lead to problems, such as an increase in the torque required to drive the valve, reduction in the packing's working life, or the breaking of the packing gland.
- Once the valve is installed in its place, check that the flanges and electrical and pneumatic connections are secure. If the valve has electrical accessories or you are in an ATEX zone, earth connections must be made before operating it.
- If you are in an ATEX zone, check the continuity between the valve and the pipeline (EN 12266-2, annex B, points B.2.2.2. and B.2.3.1.). Check the pipeline's earth connection and the conductivity between the outlet and inlet pipelines.



ACTUATOR

HANDWHEEL

To operate the valve: Turn the handwheel clockwise to close or anticlockwise to open.

CHAINWHEEL

To operate the valve pull one of the chain's vertical drops, taking into account that locking is carried out when the chainwheel turns clockwise.

LEVER

First loosen the position locking clamp located on the yoke. Once it is unlocked raise the lever to open or lower it to close. To complete the operation lock the lever again.

GEAR-BOX

To operate the valve: Turn the handwheel clockwise to close or anticlockwise to open.

PNEUMATIC (double and single acting)

The pneumatic actuators are designed to be connected to a 6 bar pneumatic network, although these cylinders support up to 10 bar. The pressurised air used for the pneumatic actuator must be correctly filtered and lubricated. This type of actuator does not require any adjustment, due to the fact that the pneumatic cylinder is designed for the exact stroke required by the valve.

HYDRAULIC

The hydraulic actuators are designed to work at a standard pressure of 135 bar. This type of actuator does not require any adjustment, due to the fact that the hydraulic cylinder is designed for the exact stroke required by the valve.

MOTORISED

If the valve incorporates a motorised actuator it will be accompanied with the electric actuator supplier's instructions.

Stem extensions have also been developed, allowing the drive to be located far away from the valve, to suit all needs. Please ask our engineers beforehand.

H/A = RISING STEM
H/NA = NON-RISING STEM.

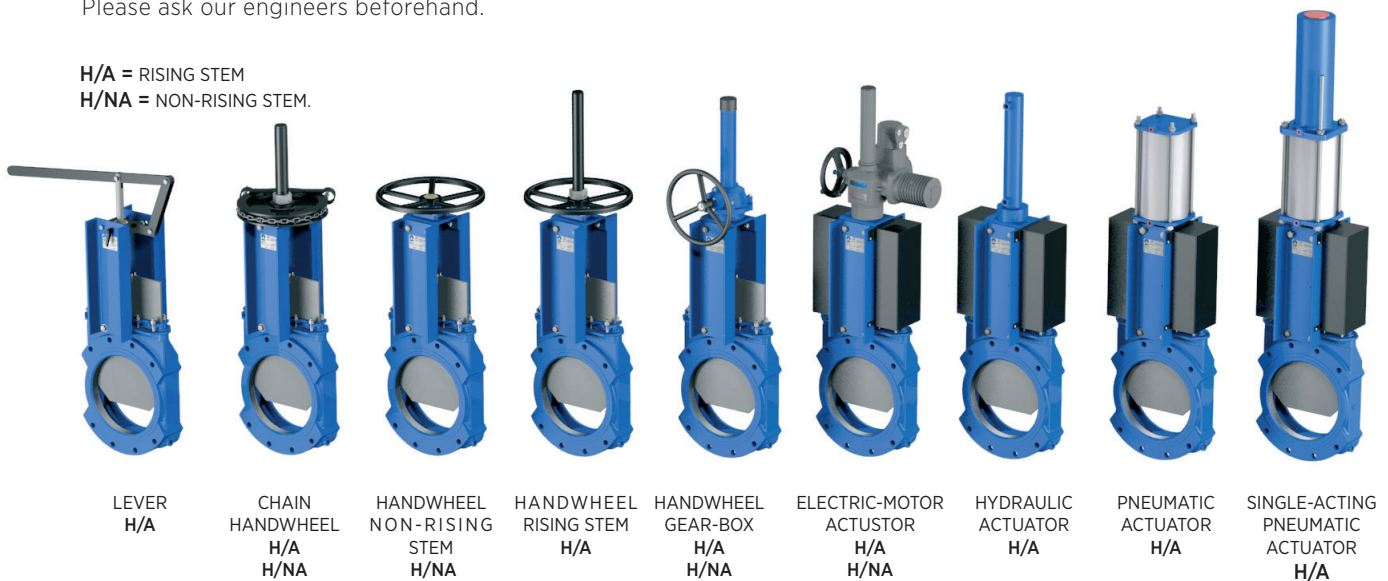


Fig. 4

MAINTENANCE



In order to avoid personal harm and other types of damage (to the plant, etc.) please follow these recommendations:

- The staff member responsible for the installation, operation and maintenance of the valves must be qualified and trained in the operation of similar valves.
- Appropriate personal protection must be used (gloves, safety boots, goggles, helmet...).
- Shut off all operating lines to the valve and put up a warning sign.
- Completely isolate the valve from the process.
- Fully depressurise the process.
- Drain all the line's fluid through the valve.
- Use hand tools not electric tools during the installation and maintenance, in according to current regulations.

The only maintenance required in this type of valve is to change the seat's rubber joint (if soft seated valve is used) and the packing. It is recommended to check the seal every 6 months, however its working life will depend on the valve's operating conditions, such as: Pressure, temperature, number of operations, fluid composition, among others.



In an ATEX zone, electrostatic charges may be present inside the valve, which can cause explosions. The user is responsible for minimising the risks.

- The maintenance staff must consider the risks of explosion and ATEX training is recommended.
- If the fluid transported constitutes an internal explosive atmosphere, the user must regularly check the installation's correct watertight integrity.
- Regular cleaning of the valve to prevent accumulation of dust. Assemblies not permitted at the end of the line. Avoid painting the products supplied.

LUBRICATION



It is recommended to lubricate the stem twice a year by removing the protection cap and filling it with grease up to half its volume.

After the maintenance and in an ATEX zone, you must check the electrical continuity between the pipe and the rest of the valve's components, such as the body, gate, stem, with EN 12266-2 Standard, annex B, points B.2.2.2. and B.2.3.1

IMPORTANT SAFETY ASPECTS

- In order to work under ideal safety conditions, the magnetic and electrical elements must be in idle mode and the air tanks depressurised. The electrical control cabinets must also be out of service.
- The maintenance staff must be up to date with the safety regulations and work can only start under orders from the site's safety staff.
- The safety areas must be clearly marked and you must avoid placing auxiliary equipment (ladders, scaffolding, etc.) on levers or mobile parts which will lead to the movement of the gate valve.
- In equipment with spring return actuators, the gate must be mechanically locked and only unlocked when the actuator is pressurised.
- In equipment with electrical actuator, it is recommended to disconnect it from the mains in order to access the mobile parts without any risk.
- Due to its great importance, you must check that the valve's axle has no load before disassembling the actuator system.

Taking into account the recommendations indicated, below we indicate the maintenance operations carried out in this type of equipment:

REPLACING THE SEALING JOINT (Watertight Valves)

1. Make sure there is absolutely no pressure and fluid in the installation.
2. Remove the valve from the pipeline.
3. Remove the actuator and safety guards (if present) by unscrewing and removing the bolts connecting the stem to the gate and the support plate to the body.
4. Remove the packing gland (4).
5. Remove the old packing (5), taking care not to damage the packing rubber strip (6).
6. Remove the gate (2) carefully without losing the nylon slides (3).
7. Clean the inside surfaces of the valve.
8. Remove the ring (8) that secures the sealing joint (9). To this end, apply a few sharp knocks to the outside with a bronze object at the base of the ring until it comes out.
9. Remove the old sealing joint (9) and clean its housing.
10. Fit a new sealing joint (9) with the same dimensions as the old one or use the dimensions shown below (table 1).
11. Insert the retaining ring (8) in its original position as indicated
 - Place the retaining ring (8) in perfect alignment parallel to the sealing joint.
 - Push the ring (8) as a whole towards the base of the channel.
 - Check that all areas of the ring (6) are correctly inserted, in perfect contact with the valve and the joint (5) has not been damaged in the process.
12. The valve assembly will be performed in exactly the opposite way to the disassembly.

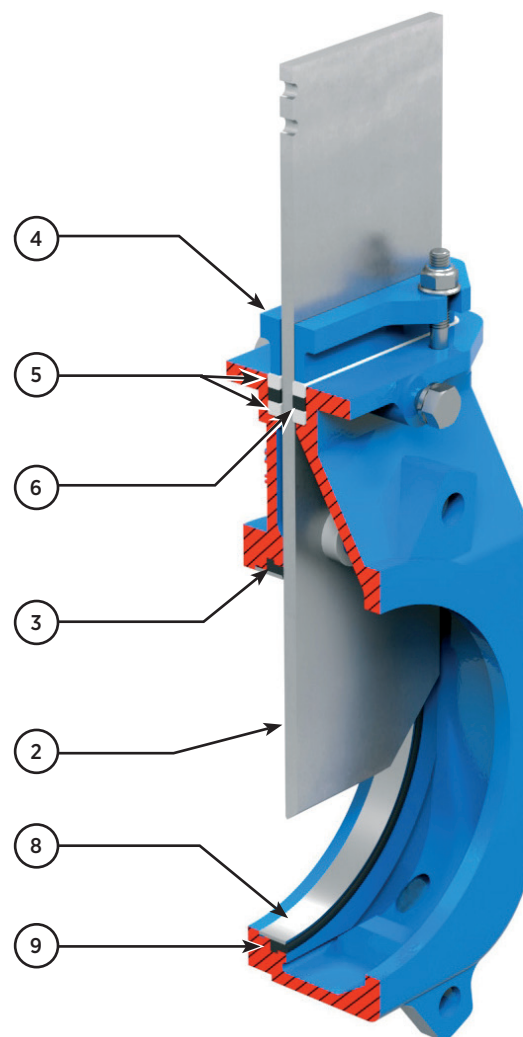


Fig. 5

DN	50	65	80	100	125	150	200	250	300	350	400	450	500	600	700	800	900	1000	1100	1200
Long.	190	250	290	370	445	530	690	845	1005	1175	1350	1520	1710	2020	2300	2680	3030	3367	3681	3995

Table 1

***Note:** During the assembly of the new sealing joint it is recommended to apply "Vaseline" to the seal to facilitate the assembly process and the correct operation of the valve (do not use oil or grease); table 2 below shows details of the Vaseline used.

VASELINA FILANTE		
Color Saybolt	ASTM D-156	15
Punto de Fusión (°C)	ASTM D-156	60
Viscosidad a 100°C	ASTM D-156	5
Penetración 25°C mm./ 10	ASTM D-156	165
Contenido de silicona	No contiene	
Farmacopea BP	OK	

Table 2

REPLACING THE SEALING JOINT (Teflon or PTFE)

You must follow the same operations that we have just described for the watertight valves, but the following aspects must also be taken into account:

- To obtain greater watertight integrity in the stainless steel bodies it is advisable to apply plastic glue to the joint housing. When the body is made of iron it is usually painted so this is not necessary.
- With the seal tab (5) pointing outwards, make a circle and then form a heart shape.
- It is recommendable to insert the joint in the top part, press the arched part and insert the seal into the housing.

REPLACING THE PACKING (Fig. 6)

1. Make sure there is absolutely no pressure and fluid in the installation.
2. Place the valve in open position.
3. If the valve has safety protections, remove them.
4. Loosen the screws that connect the stem or rod to the gate.
5. Release the connection between the support plates and the body.
6. Release the connection between the support plates and the body (3).
7. Remove the old packing (5 & 6) using a pointed tool, taking care not to damage the surface of the gate (2).
8. Carefully clean the packing and make sure there are no residues anywhere so that the new packing strips fit correctly.
9. Insert the new packing (5 and 6). During this operation it is very important for both ends to be perfectly joined. Below we show the packing dimensions (Table 3).
As standard, **CMO Valves** packing is composed of 3 lines (2 packing lines and 1 rubber joint line in the middle).
10. Place the packing gland in its original position (step 5), making sure it does not touch the gate, carefully tighten all the screws crosswise and make sure the same distance is left between the gate and the packing gland on both sides.
11. Screw down the support plates and the stem, in reverse order to that described in steps 4 and 5.
12. Perform several manoeuvres with no load, checking the correct operation of the valve and ensuring the packing gland is correctly centred.
13. Pressurise the valve in the line and tighten the packing gland crosswise, enough to prevent leakages to the atmosphere.

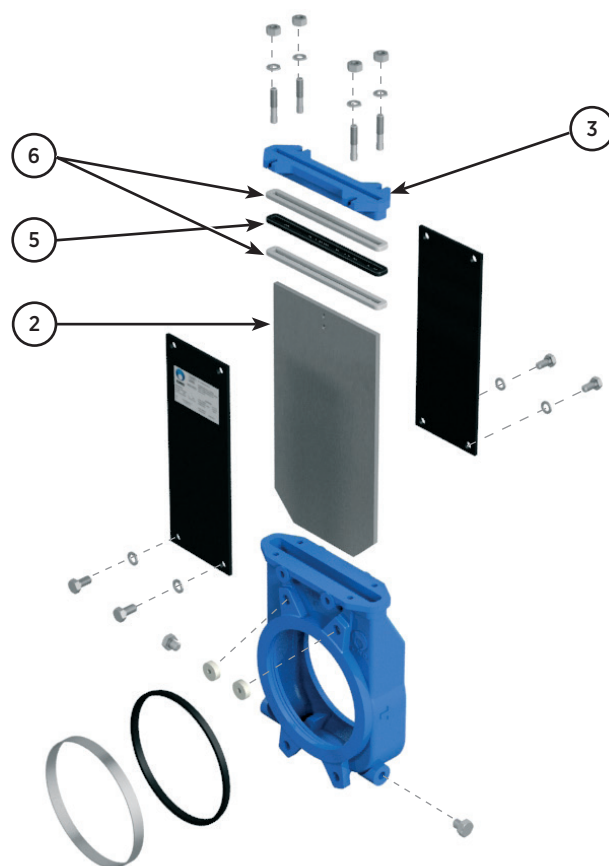


Fig. 6

DIAMETER	PACKING	RUBBER RING
DN50	2 lines de 8 x 8 x 204	1 line de 8 x 8 x 204
DN65	2 lines de 8 x 8 x 234	1 line de 8 x 8 x 234
DN80	2 lines de 8 x 8 x 264	1 line de 8 x 8 x 264
DN100	2 lines de 8 x 8 x 304	1 line de 8 x 8 x 304
DN125	2 lines de 8 x 8 x 356	1 line de 8 x 8 x 356
DN150	2 lines de 8 x 8 x 406	1 line de 8 x 8 x 406
DN200	2 lines de 8 x 8 x 516	1 line de 8 x 8 x 516
DN250	2 lines de 10 x 10 x 636	1 line de 10 x 10 x 636
DN300	2 lines de 10 x 10 x 740	1 line de 10 x 10 x 740
DN350	2 lines de 10 x 10 x 810	1 line de 10 x 10 x 810
DN400	2 lines de 10 x 10 x 928	1 line de 10 x 10 x 928
DN450	2 lines de 10 x 10 x 1028	1 line de 10 x 10 x 1028
DN500	2 lines de 14 x 14 x 1144	1 line de 14 x 14 x 1144
DN600	2 lines de 14 x 14 x 1346	1 line de 14 x 14 x 1346

Table 3

Note: - If it is not possible to place a rubber joint in the middle another packing line should be used instead.
- Dimensions are expressed in millimeters.

MAINTENANCE OF THE PNEUMATIC ACTUATOR

The pneumatic cylinders in our valves are manufactured and assembled at our premises. The maintenance of these cylinders is simple, if your need to replace any elements and you have any questions please consult **CMO Valves**. Below is an exploded diagram of the pneumatic actuator (fig 7) and a list of the cylinder's components (table 4). The top cover and the support cover are usually made of aluminium, but from pneumatic cylinders greater than Ø200 mm, they are made of cast ductile iron.

The maintenance kit normally includes: The socket and its joints and the scraper, and if the customer wishes the piston is also supplied. Below we show the steps to follow to replace these parts.

1. Position the valve in closed position and shut off the pneumatic circuit pressure.
2. Loosen the cylinder air input connections.
3. Release and remove the cylinder cap (5), the cylinder tube (4) and the tie rods (16).
4. Loosen the nut (14) which connects the piston (3) and the rod (1), remove the parts. Disassemble the cir-clip (10) and remove socket (7) with its joints (8 & 9).
5. Release and remove the cylinder head (2), in order to remove the scraper (6).
6. Replace the damaged parts with new ones and assemble the actuator in the opposite order to that described for the disassembly.

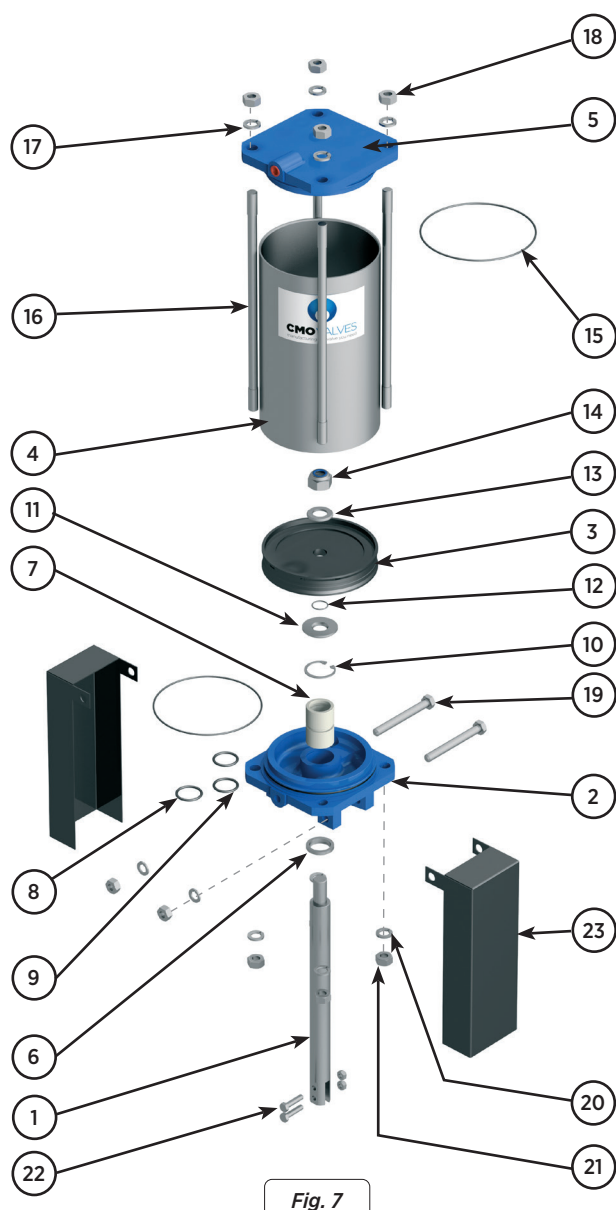


Fig. 7

PNEUMATIC ACTUATOR		
POS.	DESCRIPTION	MATERIAL
1	STEM	AISI-304
2	COVER SUPPORT	ALUMINIUM
3	PISTON	S275JR + EPDM
4	CASING	ALUMINIUM
5	UPPER COVER	ALUMINIUM
6	SCRAPER	NITRILE
7	SOCKET	PA6
8	EXTERIOR O-RING	NITRILE
9	INTERIOR O-RING	NITRILE
10	CIR-CLIP	STEEL
11	WASHER	ST ZINC
12	O-RING	NITRILE
13	WASHER	ST ZINC
14	SELF-LOCKING NUT	5.6 ZINC
15	O-RING	NITRILE
16	TIES	F-114 ZINC
17	WASHER	ST ZINC
18	NUT	5.6 ZINC
19	SCREW	5.6 ZINC
20	WASHER	ST ZINC
21	NUT	5.6 ZINC
22	SCREW	A-2
23	PROTECTION	S275JR

Table. 4

STORAGE

To ensure the valve is in optimum conditions of use after long periods of storage, it should be stored in a well-ventilated place at temperatures below 30°C.

It is not advisable, but if it is stored outside, the valve must be covered to protect it from heat and direct sunlight, with good ventilation to prevent humidity. The following aspects must be considered for storage purposes:

- The storage place must be dry and under cover.
- It is not recommended to store the equipment outdoors with direct exposure to adverse weather conditions, such as rain, wind, etc. Even less so if the equipment is not protected with packaging.
- This recommendation is even more important in areas with high humidity and saline environments. Wind can carry dust and particles which can come into contact with the valve's mobile parts and this can lead to operating difficulties. The actuator system can also be damaged due to the introduction of particles in the different elements.
- The equipment must be stored on a flat surface to avoid deformations.
- If the equipment is stored without suitable packaging it is important to keep the valve's mobile parts lubricated, for this reason it is recommended to carry out regular checks and lubrication.
- Likewise, if there are any machined surfaces without surface protection it is important for some form of protection to be applied to prevent the appearance of corrosion.

COMPONENTS LIST

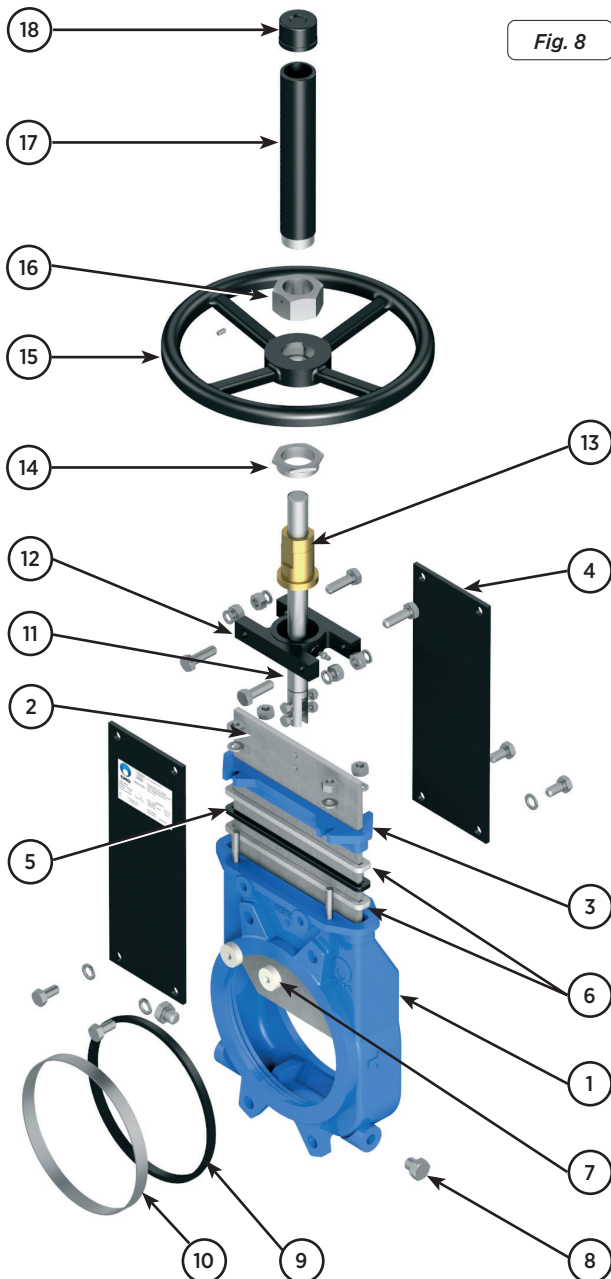


Fig. 8

HANDWHEEL DRIVE	
POS.	DESCRIPTION
1	BODY
2	GATE
3	PACKING GLAND
4	SUPPORT PLATES
5	PACKING SEAL
6	PACKING
7	GUIDE
8	THREADED CAP (OPTIONAL)
9	O-RING SEAL
10	RING
11	STEM
12	YOKE
13	STEM NUT
14	CHECK NUT
15	HANDWHEEL
16	NUT
17	HOOD
18	TOP CAP

Table 5



www.cmovalves.com



CMOVALVES

QMS CERTIFIED BY LRQA
Approval number ISO9001 0035593

CMO VALVES
HEADQUARTERS MAIN
OFFICES & FACTORY

Amategi Aldea, 142
20400 Tolosa
Gipuzkoa (Spain)

Tel.: (+34) 943 67 33 99

cmo@cmovalves.com
www.cmovalves.com

CMO VALVES
MADRID

C/ Rumania, 5 - D5 (P.E. Inbisa)
28802 Alcalá de Henares
Madrid (Spain)

Tel.: (+34) 91 877 11 80

cmomadrid@cmovalves.com
www.cmovalves.com

CMO VALVES
FRANCE

5 chemin de la Brocardière
F-69570 DARDILLY
France

Tel.: (+33) 4 72 18 94 44

cmofrance@cmovalves.com
www.cmovalves.com